

Quickstartguide Bluetooth

ESTM / ESTM-L 17-88C1-*22H* ****



1. Table of contents

1. Table of contents	3	4. Start and connection	5
2. Safety	4	5. Maintenance menu	5
Safety marking.....	4	6. Setup controller	6
3. General information	4	7. Maintain limiter.....	6

2. Safety

Safety marking

Particularly important points in these instructions are marked with a warning message:

⚠ DANGER
 DANGER draws attention to a danger which will lead to death or serious injury if not avoided.

⚠ WARNING
 WARNING draws attention to a danger which can lead to death or serious injury if not avoided.

⚠ CAUTION
 CAUTION draws attention to a danger which can lead to minor or moderate injury if not avoided.

NOTICE
 Important instructions and information on effective, economical & environmentally compatible handling.

3. General information


⚠ WARNING
 If the BARTEC Trace Command is incorrectly executed, the settings of the connected ESTM/ESTM-L can be changed, affecting the operational reliability of the entire heating system! Only trained technical personnel may run the program in online mode.

⚠ WARNING
 WARNING this manual is only an additional information for all technical details please observe the Installation instructions

NOTICE
 Disclaimer
 BARTEC GmbH shall not assume any liability for damage resulting from installation and use of the BARTEC Trace Command, and in particular no liability for personal injury or damage to property and pecuniary loss related directly or indirectly to use of the software..

Bluetooth ID:

The serial number of the ESTM/ESTM-L is used to identify the device when connecting to Bluetooth.

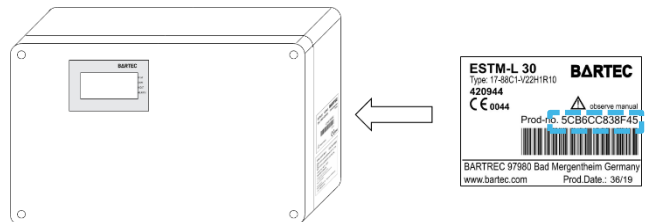


Factory set default device-password:
 „Device pin(six digets)“

ESTM-L

Temporary Pin:

3 digit in HEX (0-9 and A-F) shown on the display

4. Start and connection

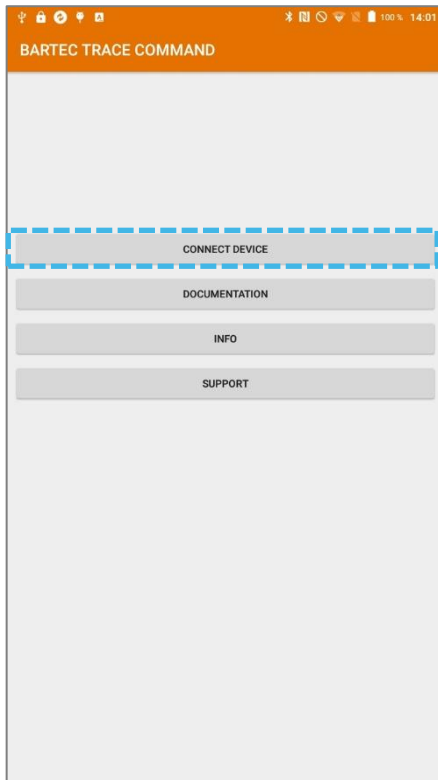


Choose „CONNECT DEVICE“ on the start screen

5. Maintenance menu



Click on MAINTENANCE

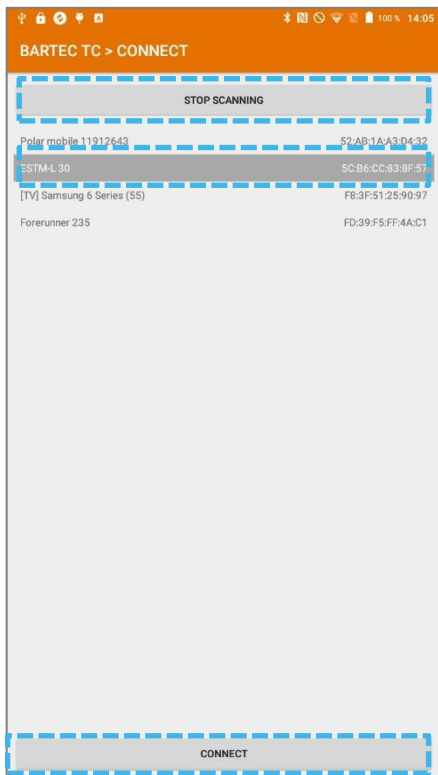


Press „SCAN“ and wait for the Bluetooth Device appearing

Select device


e.g. “ESTM-L 5CB6CC838F5C”

Press „CONNECT“

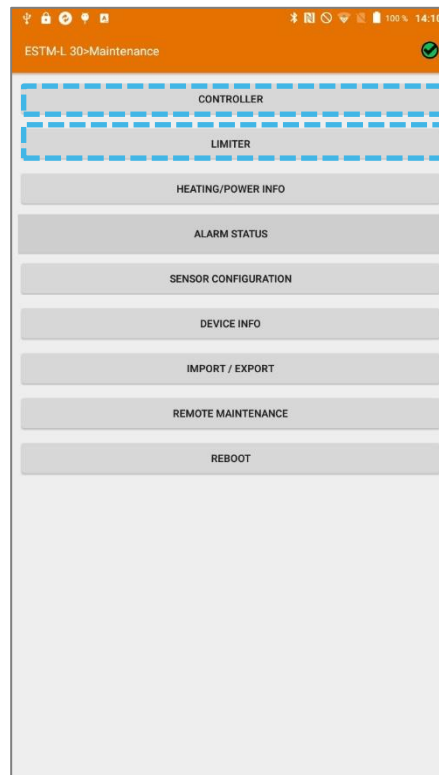

Choose „CONTROLLER“ or „LIMITER“


6. Setup controller

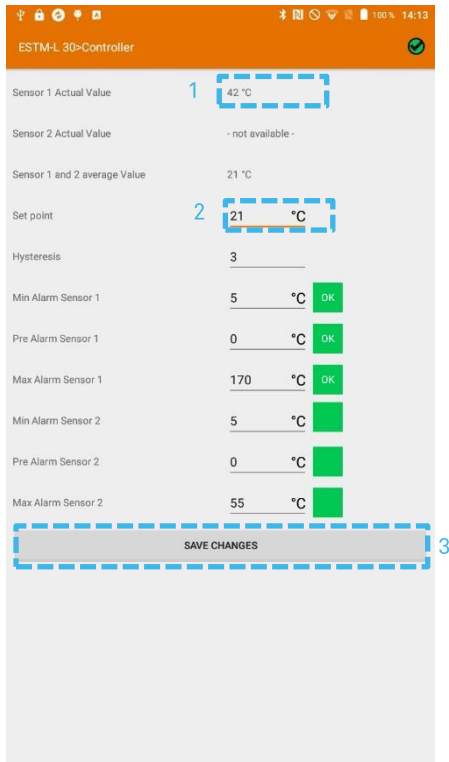

- 1 RTD #1 actual temperature
- 2 SETPOINT
- 3 SAVE

On control, you're able to change the set point and view the actual value. If you want to change settings, you need the Device password and also the Temporary Pin shown on the 7-segement display.

7. Maintain limiter

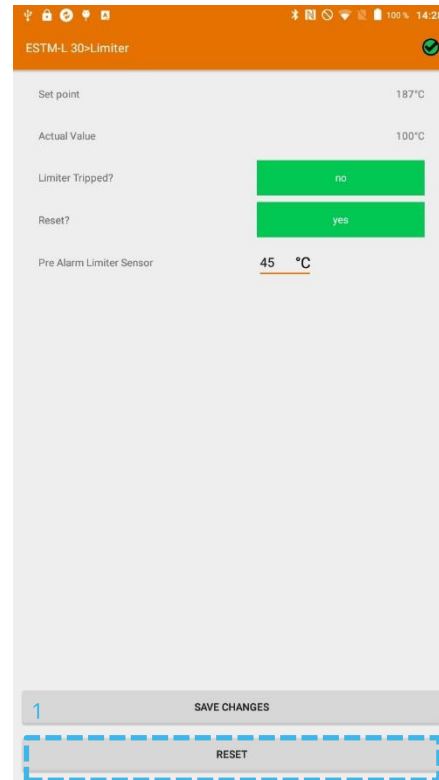

1 Reset Limiter

On limiter, you can see the set point (set up by conding element)/ actual value and status of the limiter if you want to reset the limiter, you need the Device password and also the Temporary Pin shown on the 7-segement display. This three-digit pin is Hexadecimal 0-9 and A-F.

WARNING

For safety reasons The limiter may only be reset after the trip reason has been eliminated.

BARTEC REGIONAL OFFICES**BARTEC GERMANY**

BARTEC Vertrieb Deutschland GmbH
Max-Eyth-Straße 16
97980 BAD MERGENTHEIM, Germany
Tel.: +49-79 31-597 0
Fax: +49-79 31-597 119
info@bartec.de
www.bartec.de

BARTEC AUSTRIA

BARTEC Elektrotechnik GmbH
Brown Boveri Straße 8/2/1
2351 WIENER NEUDORF, Austria
Tel.: +43-2236-212 040
Fax: +43-2236-212 04 99
office@bartec.at
www.bartec.de

BARTEC NORWAY

BARTEC Technor AS
Vestre Svanholmen 24
4313 SANDNES, Norway
+47 51 84 41 00
+47 51 84 41 01
www.bartec-technor.no
sales@bartec-technor.no

BARTEC MIDDLE EAST

BARTEC Middle East
HB-01, Near Round About 8,
Jebel Ali Free Zone
P.O. Box 17830, DUBAI,
United Arab Emirates
Tel.: +971 4 8876 162
Fax: +971 4 8876 182
bartec@bartec.ae
www.bartec.de

BARTEC FRANCE

BARTEC France
20, rue de l'industrie
BP 80420 Fegersheim
67412 ILLKIRCH CEDEX, France
Tel.: +33 3 88-59 03 05
Fax: +33 3 88-64 34 11
info@bartec.fr
www.bartec.fr

BARTEC US

BARTEC US Corp.
650 Century Plaza Drive
Suite D120
HOUSTON TX 77073, USA
Tel.: +1 281 214 8542
Fax: +1 281 214 8547
sales@bartec.us
www.bartec.us

BARTEC NETHERLANDS

BARTEC NEDERLAND b.v.
Boelewerf 25
2987 VD RIDDERKERK, The Netherlands
Tel.: +31-180-41 05 88
info@bartec.nl
www.bartec.nl

BARTEC ITALY

BARTEC S.r.l.
Via per Carpiano, 8/10
20077 MELEGNANO (Mi), Italy
Tel.: +39-02-92 27 78 00
Fax: +39-02-98 23 19 96
info@bartec.it
www.bartec.it

BARTEC SWEDEN (& DK, FI, LT, LV, EE)

BARTEC AB
Tennvägen 1
371 50 KARLSKRONA, Sweden
Tel: +46 455 68 74 00
Tel: +45 8988 1112 (for DK)
info@bartec.se
www.bartec.se

BARTEC SAUDI ARABIA

Bartec MIDDLE EAST LLC
31952 AL KHOBER P.O Box 3685
Kingdom of Saudi Arabia
Tel.: + 966 13 823 8101
Fax: + 966 13 823 8102
fahad.khan@bartec.de
www.bartec.de

BARTEC KOREA

BARTEC Ltd, Korea
C-601, 168, Gasandigital 1-ro,
Geumcheon-gu, Seoul, Korea
Tel.: +82 2 2631 4271
Fax: +82 2 6264 1609
info@bartec.co.kr
www.bartec.de

BARTEC CHINA

BARTEC Explosion Proof Appliances
(Shanghai) Co. Ltd.
New Building 7, No. 188 Xinjun Ring Road
Caohejing Pujiang Hi-Tech Park
(Pudong Area), Minhang District
201114 SHANGHAI, China
Tel.: +86 21 34637288
Fax: +86 21 34637282
info@bartec.com.cn
www.bartec.com.cn

BARTEC BELGIUM

BARTEC Belgium N. V.
H. Hartlaan 26,
Industriepark Schoonhees West Zone 1
3980 TESSENDERLO, Belgium
Tel.: +32-13-67 23 08
Fax: +32-13-67 23 09
bartec@bartec.be
www.bartec.be

BARTEC UK

BARTEC (UK) Ltd.
Arundel House, Little 66
Hollins Brook Park, Pilsworth Road
BURY BL9 8RN, United Kingdom
Tel.: +44-8444 992 710
Int Tel.: +44 161 767 1590
Fax: +44-8444 992 715
Int Fax: +44 161 767 1591
info@bartec.co.uk
www.bartec.co.uk

BARTEC RUSSIA

000 „BARTEC Rus“
5A, bld. 1 Volkovskoe Shosse
“Volkovsky” Business Center, Office 401
141006, MYTISCHI, MOSCOW REGION
Russia
Tel. + Fax: +7 495 249 0542
mail@bartec-russia.ru
www.bartec-russia.ru

BARTEC INDIA

BARTEC India Pvt. Ltd.
C-56 /45, 1st Floor-Priska Tower,
Sector-62 NOIDA-201309, U.P, INDIA
Tel.: +91 120 4523 200
Fax: +91 120 4523 264
E-mail: info.bartecindia@bartec.in
www.bartec.de

BARTEC LATIN AMERICA

BARTEC LATAM SAS
Calle 106 # 54-78
Oficina 402, Torre Empresarial Baikal
BOGOTA D.C., Colombia
Tel.: +57 (1) 7035 146 (Sales)
Tel.: +57 (1) 7559 301 (Admin)
info@bartec.com.co
www.bartec.com.co

BARTEC ASIA PACIFIC

BARTEC Pte Ltd
63 Hillview Avenue
07-20/21 Lam Soon Building
SINGAPORE 669569
Tel.: +65-6 7625030
Fax: +65-6 7625031
info@bartecasia.com
www.bartecasia.com